


**BATTERY REPLACEMENT:**

- REMOVE SCREW TO OPEN BATTERY COMPARTMENT COVER;
- THIS UNIT REQUIRES 3 X "AA" (LR6) BATTERIES;
- ALWAYS REPLACE ALL BATTERIES AT THE SAME TIME;
- REPLACE THE BATTERY COMPARTMENT DOOR AND SECURE WITH SCREW;
- NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED;
- RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION;
- RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED;
- DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES ARE NOT TO BE MIXED;
- ONLY BATTERIES OF THE SAME OR EQUIVALENT TYPE AS RECOMMENDED ARE TO BE USED;
- BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY;
- EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY;
- THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED.

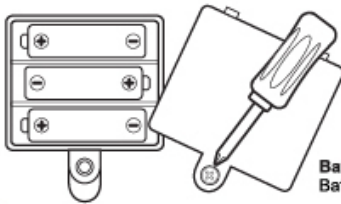

**Batteries – 3 X 1.5V (AA,UM3) LR6**  
Batteries included for demonstration purpose only.



**ELECTRICAL PRODUCTS SHOULD NOT BE  
DISPOSED OF WITH HOUSEHOLD WASTE.  
PLEASE RECYCLE WHERE FACILITIES EXIST.  
CHECK WITH YOUR LOCAL AUTHORITY FOR  
RECYCLING ADVICE.**