


Battery Replacement:

- Remove screw to open battery compartment cover.
- This unit requires 3 X 'AA' (LR6) Batteries.
- Always replace all batteries at the same time.
- Replace the battery compartment door and secure with screw.
- Non-rechargeable batteries are not to be recharged.
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

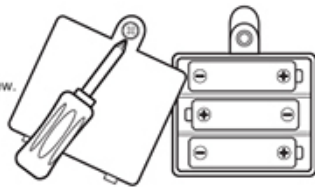

Batteries – 3 X 1.5V (AA,UM3) LR6
Batteries included for demonstration purpose only.



WASTE ELECTRICAL PRODUCTS SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD WASTE. PLEASE RECYCLE WHERE FACILITIES EXIST. CHECK WITH YOUR LOCAL AUTHORITY FOR RECYCLING ADVICE.

- All wire ties and plastic pieces are not parts of the toy and should be removed before giving it to your child.
- The packaging has to be kept since it contains important information.
- Specification, colors and contents are subject to change without notice.
- Photos and illustrations may vary from actual product.
- Please retain importer name and address for future reference.