





# Sing Along Microphone

## Assembly Instructions



Item # G02524

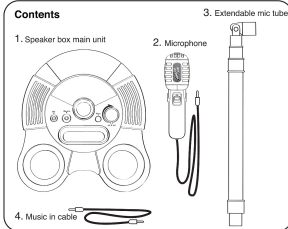

### Product Features Description

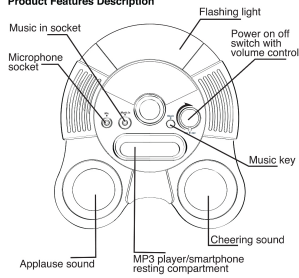

### Assembly and play

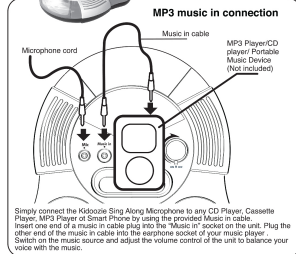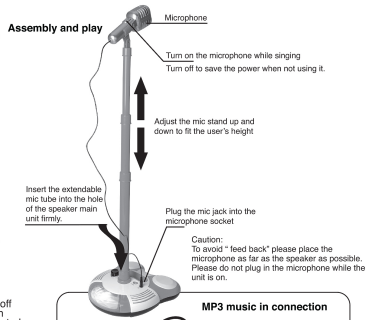

Simply connect the Kidoozie Sing Along Microphone to any CD Player, Cassette Player, MP3 Player or Smart Phone by using the provided Music in cable. Insert one end of a music in cable into the 'Music in' socket on the unit. Plug the other end of the music in cable into the earphone socket of your music player. Switch on the music source and adjust the volume control of the unit to balance your voice with the music.



75D Lackawanna Avenue  
Parsippany, New Jersey 07054 USA  
1-800-631-1272  
www.EpochEverlastingPlay.com


Made in China  
Fabriqué en Chine  
©2018 Epoch Everlasting Play LLC




# Micro chante avec moi

## Consignes d'assemblage



Item # G02524

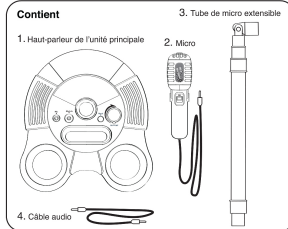

### Description des caractéristiques du produit

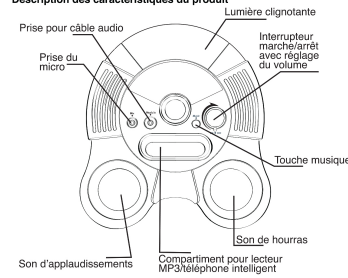

### Assemblage et fonctionnement

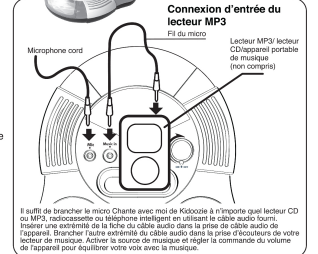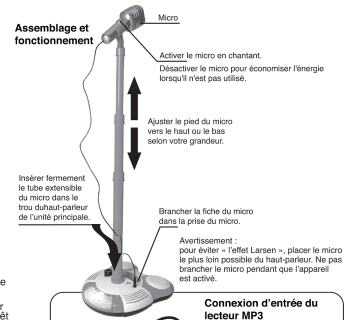

Il suffit de brancher le micro Chante avec moi de Kidoozie à n'importe quel lecteur CD ou MP3, radiocassette ou téléphone intelligent en utilisant le câble audio fourni. Insérer une extrémité de la fiche du câble audio dans la prise de câble audio de l'appareil. Brancher l'autre extrémité du câble audio dans la prise d'écouteurs de votre lecteur de musique. Activer la source de musique et régler le commande du volume de l'appareil pour équilibrer votre voix avec la musique.



75D Lackawanna Avenue  
Parsippany, New Jersey 07054 USA  
1-800-631-1272  
www.EpochEverlastingPlay.com

Made in China  
Fabriqué en Chine  
©2018 Epoch Everlasting Play LLC